
## **CMH Grow Lights**



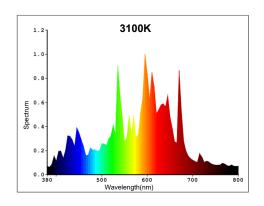


#### **Protections**

- 1.End of Lamp Life(EOL)Protection
- 2.Short circuit protection
- 3.Open circuit protection 4.Ignition failure protection
- 5.Thermal protection

#### Instruction

The light must be lighted with standard power. And after 10 minutes, then turn the knob to adjust the light.

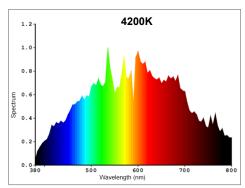

## **Installation & Application Notes**

- 1. Max. allowable case temperature:75°C/167°F.
- 2. Ambient Temperature:-20...+40°C/-4...+104°F.
- 3. Max. Humidity:95%.
- 4. Ignition voltage is 5kV.
- 5. warranty of the ballast: 3 years
- 6. warranty of the lamp: 1 year







01

# **Notice**

## Avoid the risk of electric shock:

Turn off the power when checking, installing, and replacing the lamp. Avoid contact between the ballast and the liquid to prevent liquid infiltration and short circuit.

# Avoid the risk of fire:

Keep away from the flammable and explosive substances

Water damage can cause short-circuit, and may cause electric shock, fire, or property damage. Do not exceed the rated voltage of the ballast.

Do not use when the casing is cracked, cracked or out skindeformed. Use within the rated life.

Turn on the switch after it is fully installed.

Only use matched ballast and light sources.

Be grounded and pay attention to the heat dissipation when installing the lamp.

The input terminal and output terminal cannot be reversed.

Physical					
Case Length	72.5cm	28.5"	Height	19cm	7.5"
Case Width	32cm	12.6"	Weight	7.7kg	17lb

## Avoid the risk of burns:

Do not touch the lamp before it has cooled down.

Pls do not open the shell immediately after turning off the light to avoid the capacitor discharge and burn

. Use professional tools when installing and removing. The ballast must be power off when replacing the bulb, and wait about 10 minutes for the bulb cooling and avoid skin burns

#### Notice:

If the bulb is not lit, after 30 minutes, the ballast will automatically stop working .

The ballast must be power off when replacing the bulb

The interval between power-off of the ballast and power-up again must be over 8 minutes.

## **Dimming Type**

Dimming Type: 400W 440W 500W 630W AUTO

External control:0-10V Master Controller

Performance					
Lamp	1*630W	Input Power	650W		
Rated mains voltage	120V-240V	Operation frequency	>160KHz		
Voltage range	120V-270V	Min Power Factor	>0.99		
Input Current	45A /220V 5A/240V	THD	<8%		
Mains frequency	50/60Hz	Crest Factor	<1.7		

http://www.udwells.com